

Maxitrol
Company's

NEW

D
P
FM
E

Temperature Control Systems

Built-In with:

- Mild Weather Lockout
- Freeze Thermostat



MAXITROL  company

Upgrade to the newest features & technology

Programmable Thermostat

(all systems)

Program temperature set points.

7 day programmable, 4 times per day.

Manual or set-up control console.

Remote room sensing (optional) °F/°C.

Mild Weather Lockout

Disables burner when outside air temperature is at or above user-defined set point.

Freeze Thermostat

Disables fan if discharge air temperature is not above user-defined temperature after a user-defined period of time.

Low Fire Timer Delay

User-defined delay to high fire during Startup.

Occupied/Unoccupied Mode

When set-point is decreased by user-defined number of degrees, the fan is disabled.

Now with Built-in Mild Weather Lockout & Freeze Thermostat

Maxitrol's new temperature control

systems are for use with Direct Gas-Fired Makeup Modulating Air Heaters.

The DFM14 and DFM14E systems control discharge air temperature while DFM44 and DFM44E systems control space temperature.



System Features

MAXITROL

 


	DFM14				DFM14E				DFM44(R)				DFM44E(R)			
	2.1	2.2	2.3	2.4	2.1	2.2	2.3	2.4	2.1	2.2	2.3	2.4	2.1	2.2	2.3	2.4
Mild Weather Lockout		■		■		■		■		■		■		■		■
Freeze Thermostat			■	■			■	■			■	■			■	■
Low Fire Start Timer	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Occupied/Unoccupied Mode									■	■	■	■	■	■	■	■
Z83.18 Compliant					■	■	■	■					■	■	■	■
Remote Space Temperature Sensor									■	■	■	■	■	■	■	■


DFM and DFME Temperature Control System Requirements

	DFM14	DFM14E	DFM44(R)	DFM44E(R)
Supplied	Instruction Manual CD-ROM Amplifier Selector Discharge Air Sensor M/MR212 Valve Outdoor Air Sensor (w/version 2.2, 2.4)	Instruction Manual CD-ROM Amplifier Selector Discharge Air Sensor M/MR212 Valve Outdoor Air Sensor Return Air Sensor	Instruction Manual CD-ROM Amplifier Thermostat Discharge Air Sensor M/MR212 Valve Outdoor Air Sensor (w/version 2.2, 2.4)	Instruction Manual CD-ROM Amplifier Thermostat Discharge Air Sensor M/MR212 Valve Outdoor Air Sensor Return Air Sensor
Not Supplied	Patch Cable w/RJ45 Power Supply Serial Cable	Patch Cable w/RJ45 Power Supply Serial Cable	Patch Cable w/RJ45 Power Supply Serial Cable	Patch Cable w/RJ45 Power Supply Serial Cable
Options	Outdoor air sensor (version 2.2, 2.4) Return air sensor		Outdoor air sensor (version 2.2, 2.4) Return air sensor	
Building Management Systems	D-SC1 SIGNAL CONDITIONER Allows a certified recirculating heater to be used with a building management system.			

DFM44E Screen Shots

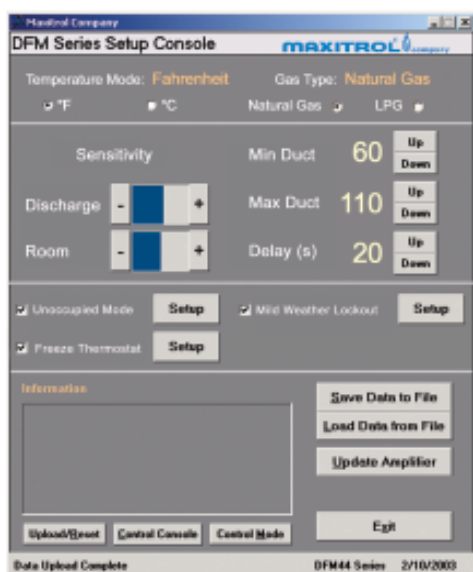


Setup Console

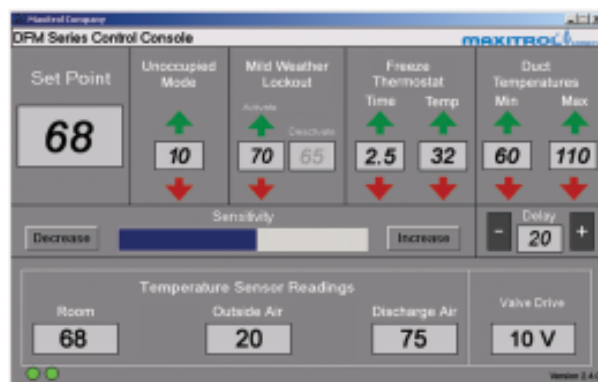 

Control Console

 
Freeze
Thermostat

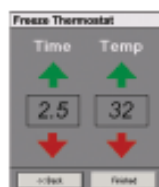

Unoccupied
Mode



 Mild Weather
Lockout

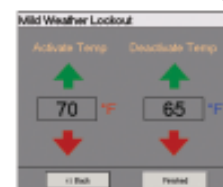



© 2004, Maxitrol Company, All Rights Reserved.