

### **WARNING**

Service and installation must be performed by a trained/experienced service technician.

All products, including gas pressure regulators, used with combustible gas must be installed and used strictly in accordance with instructions of the manufacturer, with government codes and regulations, and plumbing codes and practices. Maxitrol line pressure regulators should be installed and operated in accordance with our “Safety Warning Instructions.”

NOTE: When a vent limiter is installed, the valve must be mounted in a horizontal, upright position.




## Why can't I install the regulator sideways or upside down?

If a regulator with a **▼ Limiter®** vent limiting device is installed in any orientation other than the horizontal upright position, the ball check in the vent limiter will roll into the Limiting Position.

When the ball check is in the Limiting Position, the regulator will experience high lock-up and will not operate properly.


Must be installed directly in vent: do not use elbow to place upright.

**CORRECT**

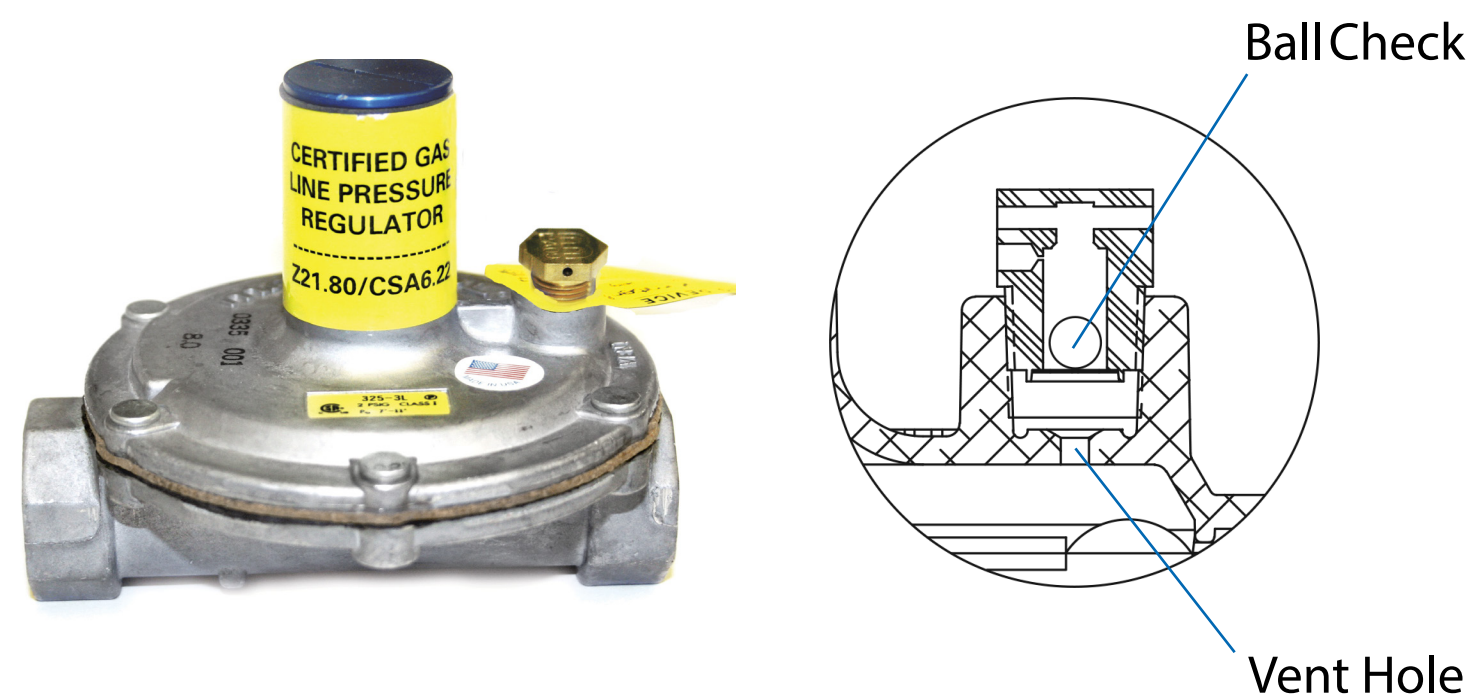


Open/Normal Position

**INCORRECT**

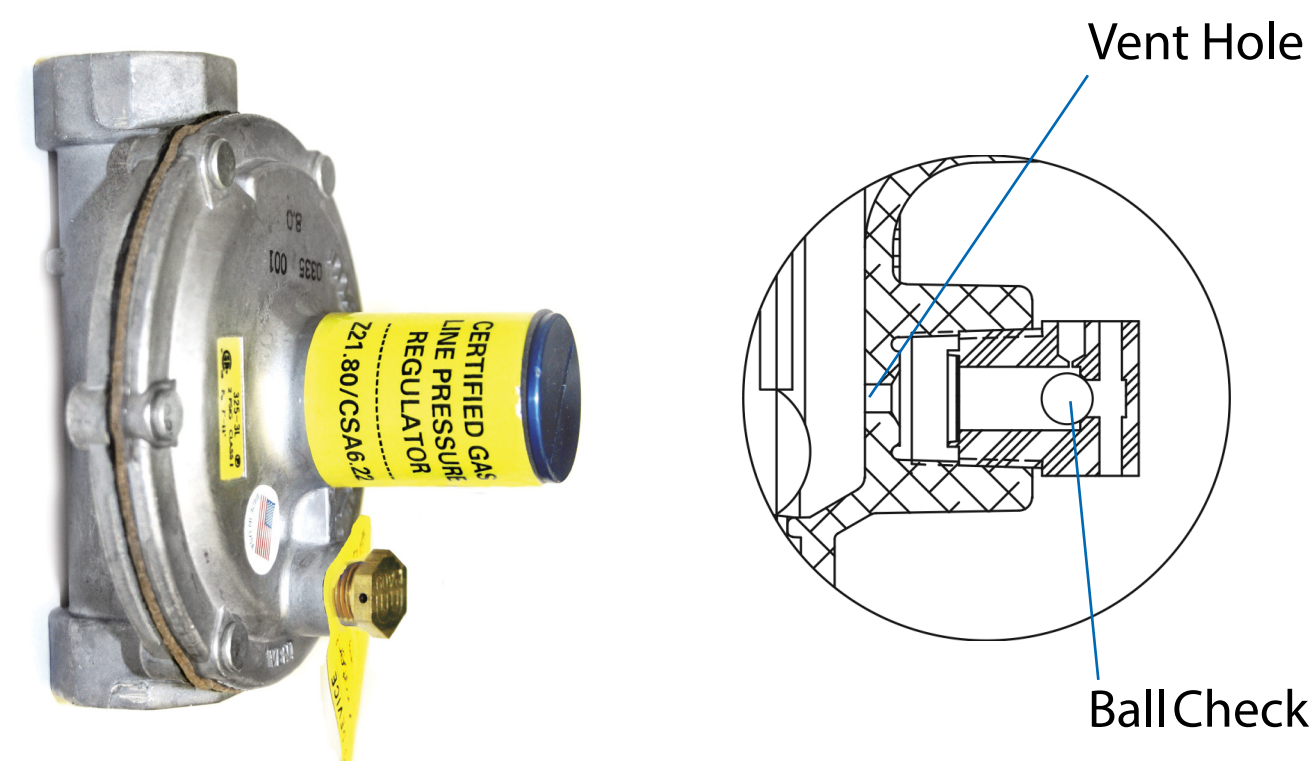

Closed/Limiting Position

**INCORRECT**

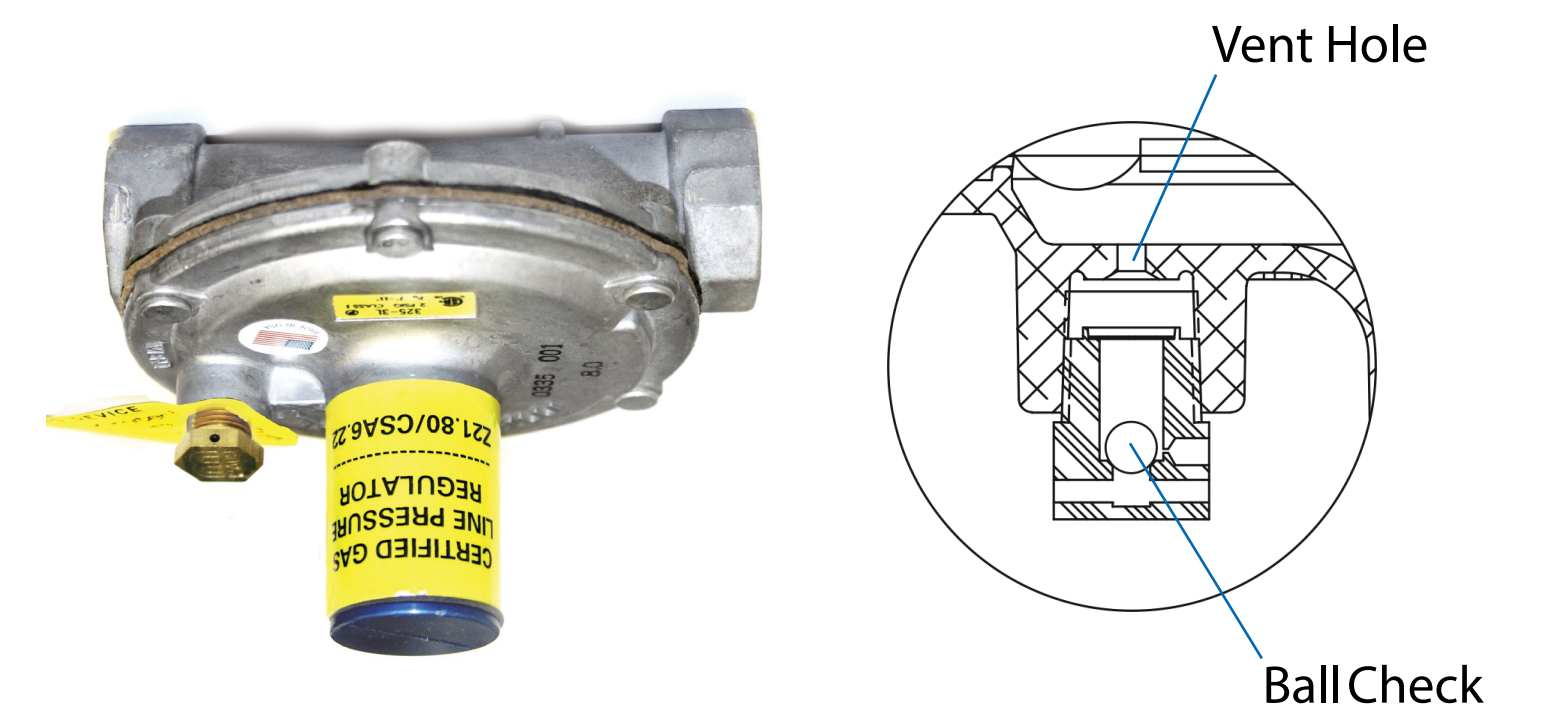

Closed/Limiting Position