

**ENGLISH**

GV60 Bidirectional Control System
for use with myfirePuck™, Symax® Handsets and myfire® App
Operating Instructions

GV60 Bidirectional Control System for use with myfire Puck™, Symax® Handsets and myfire® App

Operating Instructions

IMPORTANT INFORMATION

Safety Information	2
General Installation Information	2

DESCRIPTION AND COMPONENTS

Description	3
Components	3

COMBINATION GAS CONTROL/SYSTEM

Technical Data	4
Mounting Position	5
Gas Connections	5
Perform Gas Leak Test	5
Wiring	6
Thermocouple Circuit	6
Ignition Cable	6
Receiver	6
Synchronization of Receiver and Handset	7
V Module	7
Knob Settings	8
Adjustment	8
Final Check	9
Manual Operation	9
Turn off Gas to Appliance	10
Automatic turn down to pilot (motor endstop)	10
Automatic Shut-Off	10
System Override Shut-Off	10
External Operation	10

TOUCHPAD, WALL SWITCH AND SWITCH PANEL

Technical Data	11
Operation	11

SYMAX HANDSET

Technical Data	12
Synchronization Receiver/Symax Handset	12
General Notes	12
Function Activation/Deactivation	12

8 AND 10-BUTTON HANDSET OPERATION	
Setting Fahrenheit or Celsius	13
Setting the Time	13
Child Proof	13
Manual Mode	14
Designated Low Fire and High Fire	14
Countdown Timer	14
Modes of Operation	15
Thermostatic Mode	15
Program Mode	15
2 nd Burner Function	16
Eco Mode	16
myfire App	16

10-BUTTON HANDSET OPERATION ONLY	
Circulating Fan Operation	17
Light/Dimmer Operation	17

MYFIRE PUCK HANDSET

Technical Data	18
Synchronization Receiver/myfire Puck™	18
Modes of Operation	18

MYFIRE WI-FI BOX (B6R-W3...)

Technical Data	19
Modes of Operation	19

RGB LEDS AND LED DRIVER FOR MYFIRE WI-FI BOX

Technical Data	20
Requirements for external LED Driver	20

MYFIRE APP SETUP

Kwik Connect	21
--------------------	----

WIRING DIAGRAMS

Basic	22
Basic – With Latching Solenoid (Modulating)	23
Basic – With Latching Solenoid (Non Modulating)	24
Fan, Light/Dimmer, 2 nd Burner Function	25
2 nd Thermocouple	26
Receiver for Power Flue Control	27
Myfire App	28

IMPORTANT INFORMATION

SAFETY INFORMATION

▲ WARNING

WHAT TO DO IF YOU SMELL GAS

- Do NOT operate any appliance.
- Do NOT touch any electrical switch; do NOT use any phone in your building.
- Immediately evacuate the area and contact the gas supplier. Follow the gas supplier's instructions.
- If you cannot reach the gas supplier, call the fire department.

Read these instructions carefully and completely before installing or operating. Failure to follow them could result in a fire or explosion causing property damage, personal injury, or loss of life. Service and installation must be performed by a trained/experienced service technician.

ELECTRIC SHOCK HAZARD

- Read these instructions carefully. Failure to follow them could result in property damage, personal injury, or loss of life.
- This control must be electrically wired and operated in compliance with all codes and local regulations. Service and installation must be performed by a trained, experienced service technician.
- Do NOT use the control if you suspect it may be damaged.

FAILURE OF BATTERY OR MAINS POWER TO THE RECEIVER

If the receiver's power supply is interrupted the Maxitrol Combination Gas Control will not turn off the gas supply to the heating appliance. It will remain in the same gas flow position set prior to the power failure regardless of the room temperature. Once the receiver power is restored, the receiver will return to a normal operating mode. The pilot safety system will continue to function normally during down power occurrences.

It is the OEM's responsibility to follow all gas appliance safety standards and protect the Maxitrol products and components from exceeding maximum/minimum temperature limits (refer to appropriate product literature). The OEM is responsible for the safety of the heating appliance operation.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier. Installation shall conform with local codes, or in the absence of local codes, in compliance with the National Fuel Gas Code ANSI Z223.1/NFPA 54 or the IFGC or CSA B149.1 or AGA AS 4624; Rules Governing. All piping and tubing must comply with local codes and ordinances.

Use only your hand to push in or turn the gas control knobs. Never use tools. If a knob will not push in or turn by hand, do not try to repair it. Call a qualified service technician. Force or attempted repair can result in a fire or explosion.

Do NOT use a product if you suspect it has been subjected to high temperatures, damaged, tampered with, or taken apart. Do NOT use a product if you suspect it has been under water or that liquid has seeped into the product. Any of these incidents can cause leakage or other damage that may affect proper operation and cause potentially dangerous combustion problems.

Check the Exhaust/Flue Damper on converted or newly installed fireplaces. Damper position must be in accordance with Manufacturer's Installation Instructions and all applicable standards. Failure to follow them could result in a fire or explosion causing property damage, personal injury, or loss of life.

Do NOT store or use gasoline or other flammable vapors and liquids in the vicinity of this control or other appliances.

GENERAL INSTALLATION INFORMATION

NOTICE

It is the responsibility of the OEM to consider the following:

- The location of the GV60 system components will significantly affect the radio signal strength.
- The type of materials (e.g. sheet metal) used in the construction of the gas fireplace will significantly effect the radio signal strength.
- Operate the system with a dedicated mains power supply and/or batteries.
- Do not use near household electrical wiring and/or magnetic fields.
- Other transmitters using the same signal will negatively affect the radio signal strength.
- Adjustment of the on-board antenna on the receiver can improve signal strength.
- Do not store or locate the GV60 system components in a hot, cold, or humid environment.
- Make sure that the end user can access the receiver for a reset or to synchronize a new transmitter.
- LED installation, including LED drivers, cabling and RGB LEDs must be isolated from the metal parts of the gas appliance. Otherwise, the electronics may not function properly.

TOUCHPAD/WALL SWITCH

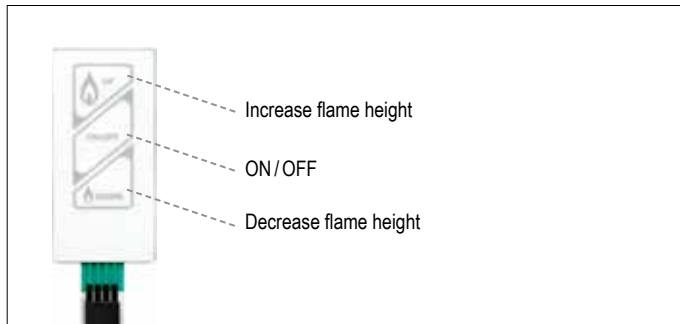


Figure 19: Touchpad/Wall Switch

TECHNICAL DATA

AMBIENT TEMPERATURE RANGE

- CSA: 32 °F to 176 °F
- CE, AGA: 0 °C to 80 °C

NOTICE

The wall switch must be protected from rain and moisture.

OPERATION



To Turn ON Appliance

- Press **ON-OFF** button (see figure 19) until two short beeps (CE, AGA version) or continuous beeping (CSA version) confirm the start sequence has begun; release button.
- Once pilot ignition is confirmed, there is main gas flow.

▲ WARNING

If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions "TO TURN OFF GAS TO APPLIANCE" (see page 10).

Flame Height Adjustment

- Press and hold  (large flame) button to increase flame height.
- Press and hold  (small flame) button to decrease flame height or to set appliance to pilot flame.

Standby Mode (Pilot Flame)

- Press and hold  (small flame) button to set appliance to pilot flame.



To Turn OFF Appliance

- Press **ON-OFF** button.

▲ WARNING

If the appliance will not operate, follow the instructions "TO TURN OFF GAS TO APPLIANCE" (see page 10).

2nd Burner/AUX

- Simultaneously press the **ON-OFF** and  (small flame) buttons to switch the decorative burner **OFF**.
- Simultaneously press **ON-OFF** and  (large flame) buttons to switch decorative burner **ON**.

NOTE: The latching solenoid valve cannot operate manually. If the receiver battery runs down it will remain in the last operating position.

SWITCH PANEL

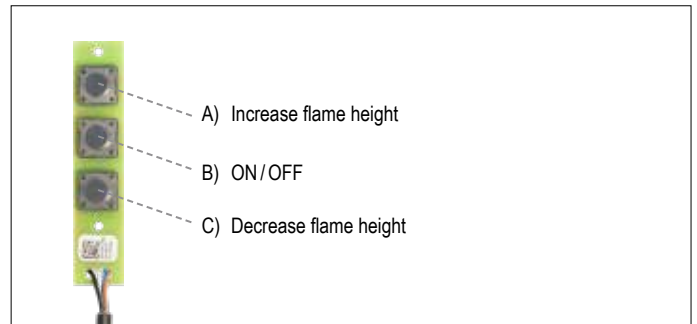


Figure 20: Switch Panel

TECHNICAL DATA

AMBIENT TEMPERATURE RANGE

- CSA: 32 °F to 221 °F
- CE, AGA: 0 °C to 105 °C

OPERATION

To Turn ON Appliance

- Press "B" button (see figure 20) until two short beeps (CE, AGA version) or continuous beeping (CSA version) confirm the start sequence has begun; release button.
- Once pilot ignition is confirmed, there is main gas flow.

▲ WARNING

If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions "TO TURN OFF GAS TO APPLIANCE" (see page 10).

Flame Height Adjustment

- Press and hold "A" button to increase flame height.
- Press and hold "C" button to decrease flame height or to set appliance to pilot flame.

Standby Mode (Pilot Flame)

- Press and hold "C" button to set appliance to pilot flame.

To Turn OFF Appliance

- Press "B" button.

▲ WARNING

If the appliance will not operate, follow the instructions "TO TURN OFF GAS TO APPLIANCE" (see page 10).

2nd Burner/AUX

- Simultaneously press the "B" and "C" buttons to switch the decorative burner **OFF**.
- Simultaneously press "B" and "A" buttons to switch decorative burner **ON**.

NOTE: The latching solenoid valve cannot operate manually. If the receiver battery runs down it will remain in the last operating position.

SYMAX HANDSET

TECHNICAL DATA

AMBIENT TEMPERATURE RANGE

- CSA: 32 °F to 131 °F
- CE, AGA: 0 °C to 55 °C

RADIO FREQUENCY

- CSA: 918.0 MHz for U.S. (FCC), Canada (ISED), (handset, receiver)
- CE: 868.1 MHz for Europe (handset, receiver)
- AGA: 918.0 MHz for New Zealand (RNZ) and Australia (ACMA) (handset, receiver)

(see general radio frequency information on page 4.)

POWER SUPPLY

- 2x AAA batteries, 1.5V (quality alkaline recommended)

NOTICE

- Wiring of control and receiver must be completed before starting ignition. Failure to do so could damage the electronics.
- The handsets and receivers are not interchangeable with previous electronics G6R and B6R-R8(9)U(T).

⚠ WARNING

To avoid damaging the electronics, do NOT use metal tools to remove the batteries from the handset/receiver.

- Without using a mains adapter, battery replacement is recommended at the beginning of each heating season.
- Old or dead batteries should be removed immediately. If left in the unit the batteries can overheat, leak, and/or explode.
- Do NOT expose batteries (including during storage) to direct sunlight, excessive heat, fire, moisture, or severe impact. Each of these conditions can cause the batteries to overheat, leak, and/or explode.
- Batteries must be kept within their recommended temperature limits (ambient battery temperature range: 32 °F to 131 °F / 0 °C to 55 °C).
- New and old batteries and different brands of batteries should not be used together. Mixing of various batteries can cause the batteries to overheat, leak, and/or explode.

SYNCHRONIZATION RECEIVER/SYMAX HANDSET

NOTICE


See page 7 for more information about synchronization between receiver and Symax handset.


GENERAL NOTES



Batteries – Handset

Low battery indicator on Symax.

Handset One Button and Two Button Ignition

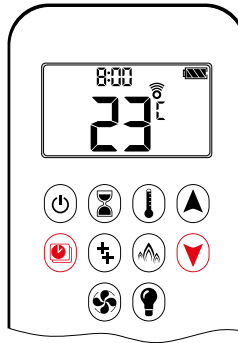Change from one button (default setting) to two button ignition or vice versa by pressing and holding  button for 10 sec. immediately after installing batteries. **ON** is displayed and **1** or **2** (One or Two Button Ignition) is flashing. When change is complete **1** changes to **2** or vice versa.



- Temperature and timer settings are stored permanently and not deleted when the battery is replaced. A reset to the default values occurs when the Programmer  and Down  button are pressed simultaneously for 8 seconds.

FUNCTION ACTIVATION/DEACTIVATION

Deactivate Functions

1. Install batteries. All icons are displayed and flashing.
2. While the icons are flashing, press the relevant function button and hold for 10 sec.
3. The function icon will flash until deactivation is complete. Deactivation is complete when the function icon and two horizontal bars “--” are displayed.

NOTE: If a deactivated button is pressed, there is no function, and two horizontal bars “--” are displayed.


NOTE: Deactivation remains in effect after change of batteries.

Activate Functions

1. Install batteries. All icons are displayed and flashing.
2. To activate a function, press the relevant button and hold for 10 sec.
3. The function icon will continue to flash until activation is complete. Activation is complete when the function icon is displayed.

The following Functions can be Deactivated/Activated

- CHILD PROOF
- PROGRAM MODE
- THERMOSTATIC MODE (also deactivates PROGRAM MODE)
- ECO MODE
- LIGHT/DIMMER OPERATION
- CIRCULATING FAN OPERATION
- 2ND BURNER FUNCTION
- COUNTDOWN TIMER

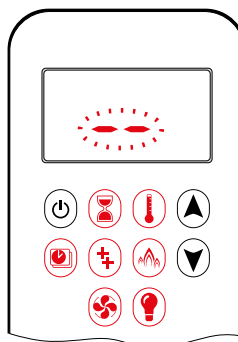

8 AND 10-BUTTON HANDSET OPERATION


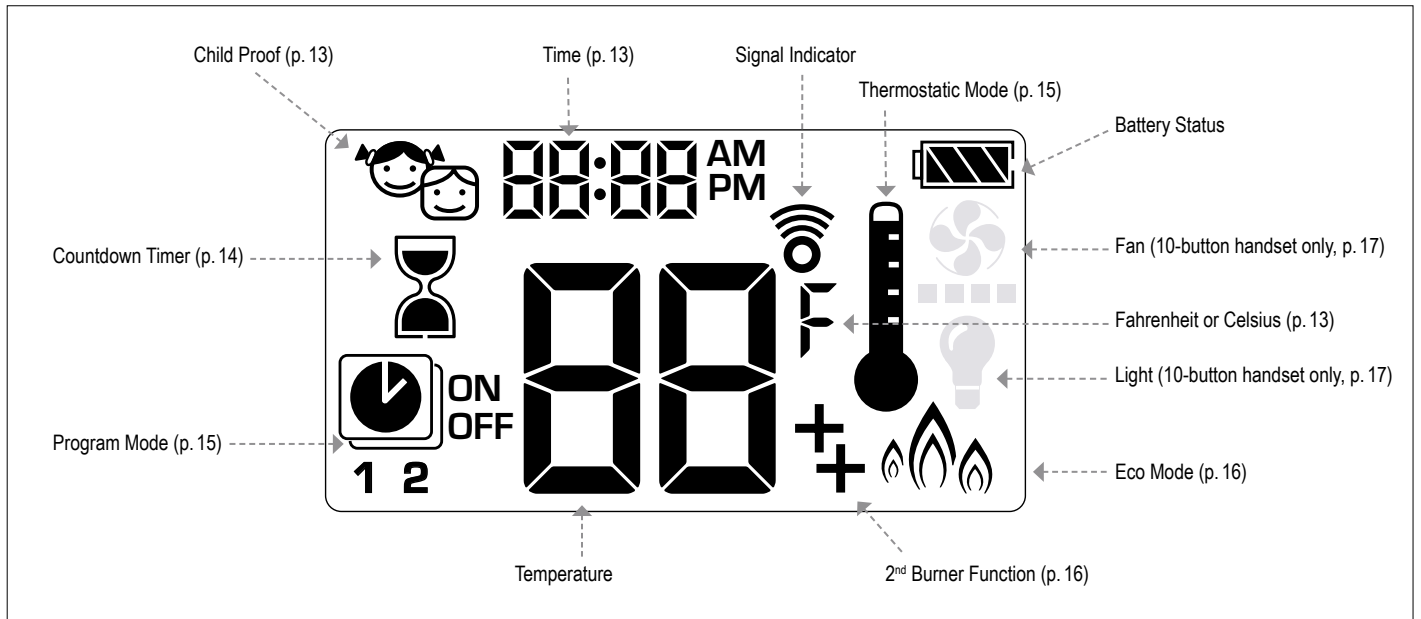


Figure 21: Symax Handset Display


SETTING FAHRENHEIT OR CELSIUS

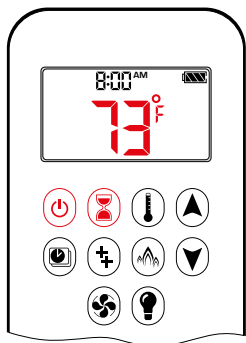

- To change between °C and °F, press and buttons simultaneously.


NOTE: Choosing °F results in a 12 hour clock. Choosing °C results in a 24 hour clock.

CHILD PROOF

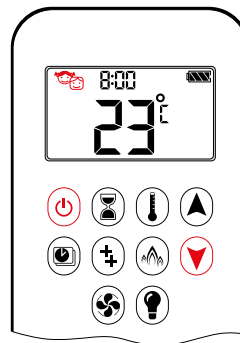

- ON:**
 - To activate press and buttons simultaneously.
 - is displayed and the Symax is rendered inoperable, except for the **OFF** function.
- OFF:**
 - To deactivate press and buttons simultaneously.
 - disappears.

SETTING THE TIME

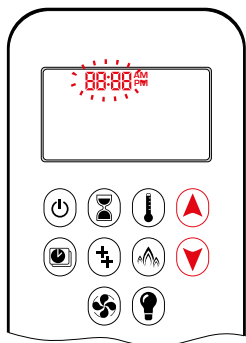

- Press and buttons simultaneously. **Day** flashes.
- Press or button to select a number to correspond with the day of the week (e.g. 1=Monday, 2=Tuesday, 3=Wednesday, 4=Thursday, 5=Friday, 6=Saturday, 7=Sunday).
- Press and buttons simultaneously. **Hour** flashes.
- To select hour press or button.
- Press and buttons simultaneously. **Minutes** flash.
- To select minutes press or button.
- To confirm press and buttons simultaneously or wait.

MANUAL MODE (HANDSET)

NOTICE


BEFORE OPERATING

1. Make sure MANUAL knob on the GV60 control is in the **ON**, full counterclockwise U position.
2. Place the **ON/OFF** switch (if equipped) in the I (**ON**) position.

TO TURN ON FIRE

⚠ WARNING

When pilot ignition is confirmed, motor turns automatically to maximum flame height.

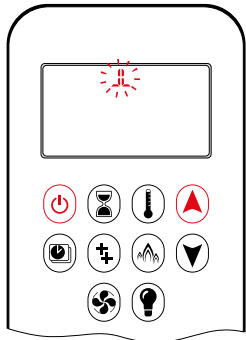

- Press button (One Button Ignition) or and button simultaneously (Two Button Ignition) until two short beeps (CE, AGA version) or continuous beeping (CSA version) and a blinking series of lines confirms the start sequence has begun; release button(s).
- Main gas flows once pilot ignition is confirmed.
- The Symax automatically goes into Manual Mode after main burner ignition.

⚠ WARNING


If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions “TURN OFF GAS TO APPLIANCE” (see page 10).

STANDBY MODE (PILOT FLAME)

Handset

- Press and hold button to set appliance to pilot flame.

TO TURN OFF FIRE

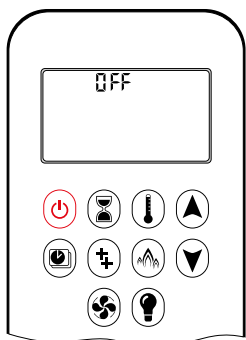

Handset

- Press button to turn off. (the handset must be in **ON** mode).


NOTE: A new ignition is possible after the **OFF** icon stops flashing.

SYSTEM OVERRIDE SHUTOFF

Handset

- If the fire will not Shutoff by pressing the button, press and hold the button for 12 seconds to shut the fire off.


FLAME HEIGHT ADJUSTMENT

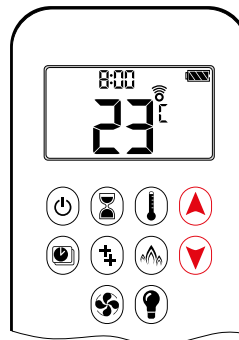

Handset


- To increase flame height press and hold button.
- To decrease flame height or to set appliance to pilot flame, press and hold button.

DESIGNATED LOW FIRE AND HIGH FIRE

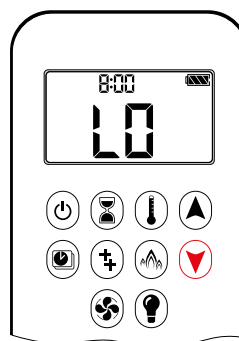

- To go to low fire, double-click button.
- is displayed.

NOTE: Flame goes to high fire first before going to low fire.

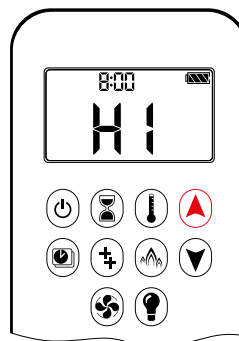


- To go to high fire, double-click button.
- is displayed.

⚠ WARNING

If the appliance will not operate, follow the instructions “TURN OFF GAS TO APPLIANCE” (see page 10).

COUNTDOWN TIMER

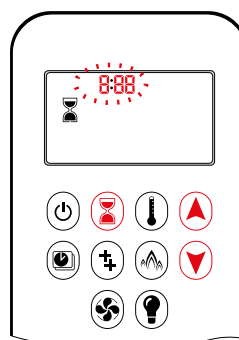

ON/SETTING:


1. Press and hold button until is displayed, and hour flashes.
2. To select hour press or button.
3. To confirm press button. **Minutes** flash.
4. To select minutes press or button.
5. To confirm press button or wait.

OFF:

- Press button.
- and Countdown Time disappear.


NOTE: At end of Countdown Time period, the fire shuts off. The Countdown Timer only works in Manual, Thermostatic, and Eco Modes. Maximum Countdown Time is 9 hours and 50 minutes.

MODES OF OPERATION

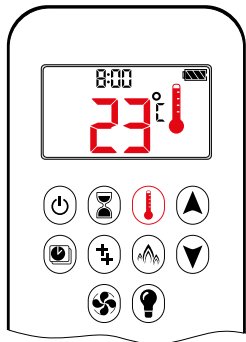


Thermostatic Mode

The room temperature is measured and compared to the set temperature. The flame height is then automatically adjusted to achieve the set temperature.

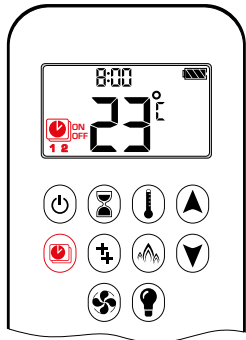

Program Mode


PROGRAM 1 and 2, each can be programmed to go ON and OFF at specific times at a set temperature.

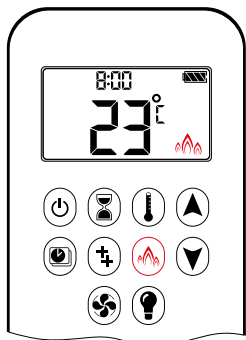

Eco Mode

Flame height modulates between high and low. If the room temperature is lower than the set temperature, the flame height stays on high for a longer period of time. If the room temperature is higher than the set temperature, the flame height stays on low for a longer period of time. One cycle lasts approx. 20 min.

THERMOSTATIC MODE

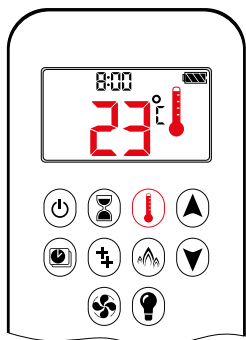


ON:

- Press button.
- is displayed, preset temperature is displayed briefly, and then room temperature is displayed.

OFF:


1. Press button.
2. Press or button to enter Manual Mode.
3. Press button to enter Program Mode.
4. Press button to enter Eco Mode.

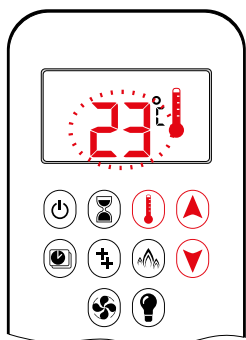

SETTING:

1. Press button and hold until is displayed, temperature flashes.
2. To adjust set temperature press or button.
3. To confirm press button or wait.


PROGRAM MODE

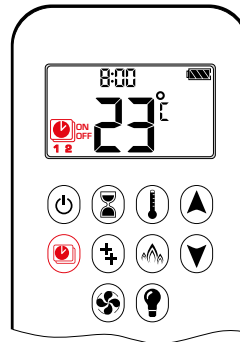

The setting process can be canceled at any time by pressing the button. However, settings made so far will be saved.

ON:

- Press button.
- , 1 or 2, ON or OFF is displayed.

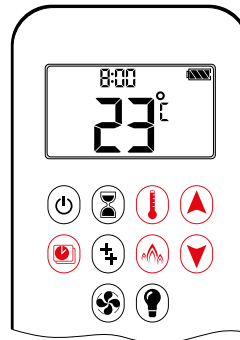

OFF:


1. Press button.
2. Press or button to enter Manual Mode.
3. Press button to enter Thermostatic Mode.
4. Press button to enter Eco Mode.

NOTE:

The set temperature for Thermostatic Mode is the temperature for the ON time in Program Mode. Changing the Thermostatic Mode set temperature also changes the ON time temperature in Program Mode.

Default settings:

- ON TIME (Thermostatic) TEMPERATURE: 70 °F / 21 °C
- OFF TIME TEMPERATURE: "--" 41 °F / 5 °C (pilot flame only)

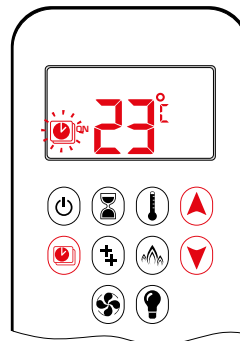


TEMPERATURE SETTING:

1. Press button and hold until flashes. ON and set temperature (setting in Thermostatic Mode) is displayed.
2. To continue press button or wait for 8 seconds. is displayed, temperature flashes.
3. Select OFF temperature by pressing the or button.
4. To confirm press button.

NOTE:


The ON (Thermostatic) and OFF set temperatures are the same for each day.

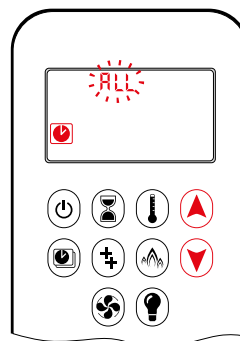

DAY SETTING:


5. ALL flashes. Press or button to choose between ALL, 5R5W, 1, 2, 3, 4, 5, 6, 7.
6. To confirm press button.

ALL selected

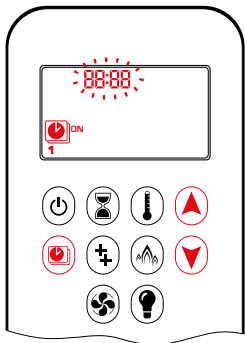

ON TIME SETTING (PROGRAM 1):

7. **1, ON** is displayed, **ALL** is displayed shortly, and **hour** flashes.
8. To select hour press or button.
9. To confirm press button. **1, ON** is displayed, **ALL** displayed shortly, and **minutes** flash.
10. To select minutes press or button.
11. To confirm press button.

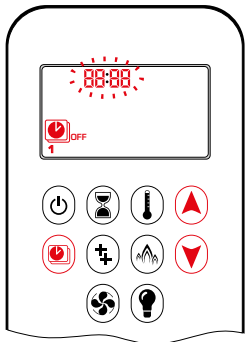

OFF TIME SETTING (PROGRAM 1):

12. **1, OFF** is displayed, **ALL** is displayed shortly, and **hour** flashes.
13. To select hour, press or button.
14. To confirm press button. **1, OFF** is displayed, **ALL** is displayed shortly, and **minutes** flash.
15. To select minutes press or button.
16. To confirm press button.

NOTE: Either continue to PROGRAM 2 and set **ON** and **OFF** times or stop programming at this point, and PROGRAM 2 remains deactivated.

NOTE: PROGRAM 1 and 2 use the same **ON** (Thermostatic) and **OFF** temperatures for **ALL**, **5R:5U** and Daily Timer (1, 2, 3, 4, 5, 6, 7). Once a new **ON** (Thermostatic) and/or **OFF** temperature has been set, that temperature becomes the new default setting.

NOTE: If **ALL**, **5R:5U** or Daily Timer are programmed for PROGRAM 1 and PROGRAM 2 **ON** and **OFF** times, these become the new default times. The batteries must be removed to clear the PROGRAM 1 and PROGRAM 2 **ON** and **OFF** times and temperatures.


5R:5U or Daily Timer (1, 2, 3, 4, 5, 6, 7) selected

- Set **ON** time and **OFF** time using same procedure as “**ALL selected**” (above).
- **5R:5U**: Set **ON** time and **OFF** time for both Saturday and Sunday.
- **Daily Timer**: Unique **ON** and **OFF** times may be set for a single day of the week, for multiple days of the week, or for every day of the week.
- Wait for 8 seconds or press the button to finish setting.

2ND BURNER FUNCTION

The latching solenoid valve will open automatically after ignition or after switching the system **OFF**, so that the maximum flow of gas is supplied to both burners assisting with the ignition process. After pressing the button for the 2nd Burner the motor will turn 15 seconds in the **ON** direction until the max. position is reached.

A latching solenoid with reverse polarity and reverse operation is available as an option. Contact Maxitrol for more information.

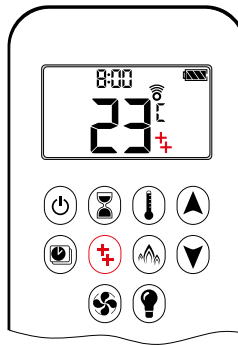

ON:


- To switch a burner **ON**, press the button.
- displayed.

OFF:

- To switch the burner **OFF**, press the button.
- disappears.

NOTE: The latching solenoid valve cannot operate manually. If the receiver battery runs down it will remain in the last operating position.

ECO MODE

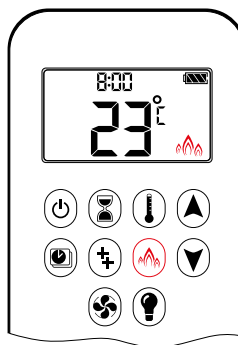

ON:

- Press button to enter Eco Mode.
- is displayed.


OFF:

1. Press button.
2. Press or button to enter Manual Mode.
3. Press button to enter Thermostatic Mode.
4. Press button to enter Program Mode.

MYFIRE APP

NOTICE

Before the App can be used, the myfire Wi-Fi Box must be wired and plugged into mains power according to myfire App setup diagram (see figure 34, page 28), and the App setup must be completed (see myfire App setup, page 21).

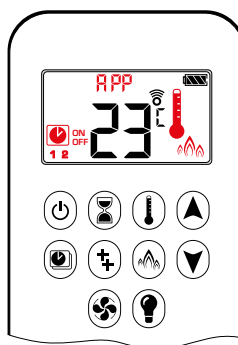

If Thermostatic, Program or Eco Mode is activated in the App, the corresponding icon and “**APP**” is displayed on the handset.

The modes can be operated according to the descriptions on previous pages.

NOTE: In Manual Mode “**APP**” is NOT displayed on the handset.

10-BUTTON HANDSET OPERATION ONLY


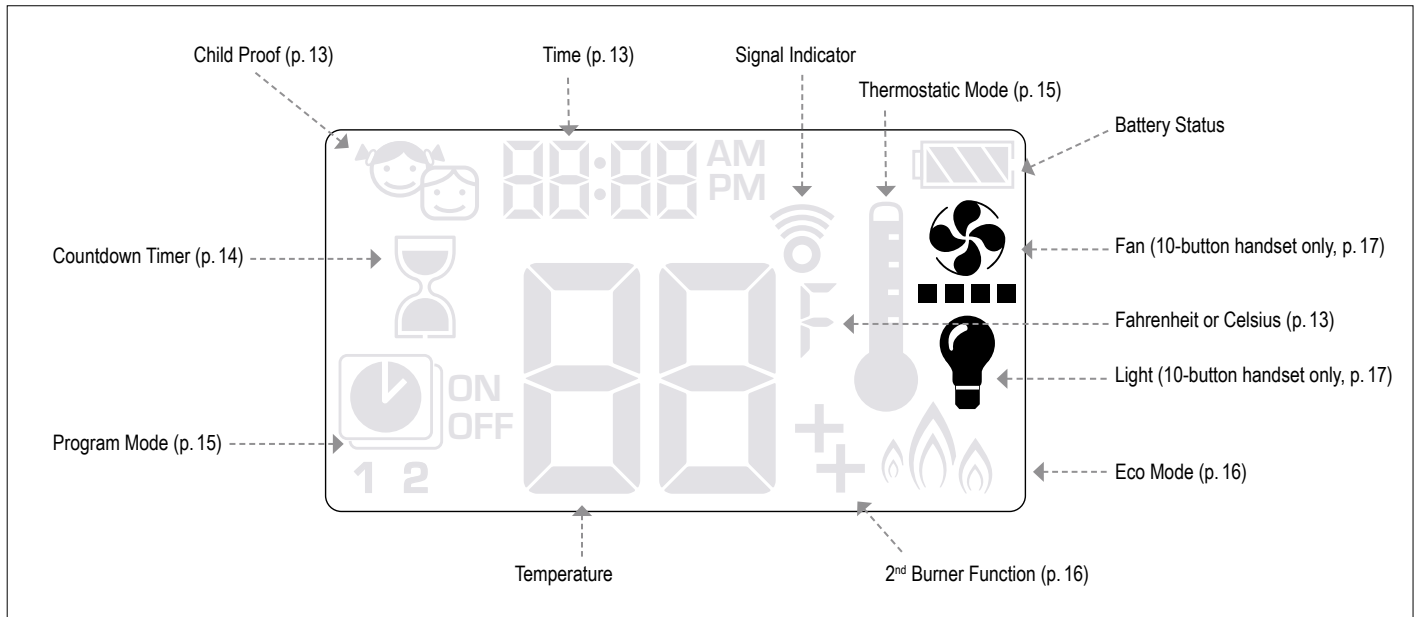


Figure 22: Symax Handset Display

ENGLISH

CIRCULATING FAN OPERATION

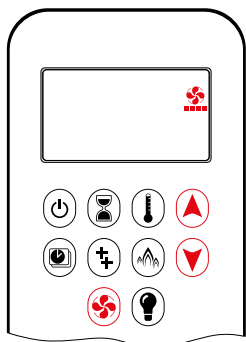

Circulating fan has 4 speed levels from low (1 bar) to high (4 bars).

ON/SETTING:


1. Press button and hold until flashes.
2. Press button to increase fan speed and button to decrease fan speed.
3. To confirm setting either press button or wait (displayed).

OFF:

- Press button until all 4 speed level bars disappear.

NOTE: SETTING only. If the fan was not switched **OFF** after last use, it starts automatically 4 minutes after ignition at maximum speed and goes to the last set level after 10 seconds. The fan stops 10 minutes after the gas is **OFF** or at pilot.

LIGHT/DIMMER OPERATION

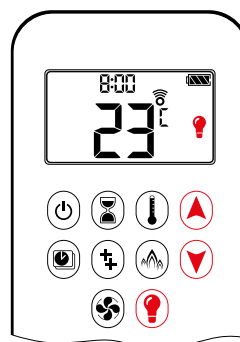

ON:

- Press button (is displayed).
- Light is **ON** at preset level.

OFF:

- Press button (disappears).

SETTING:

1. Press button and hold until flashes.
2. To adjust light between 20...100 % press or button.
3. To confirm setting either press button or wait (is displayed).

NOTE: The Light works independently of the pilot flame. If you want the light **ON** but no flame, press button.

MYFIRE PUCK HANDSET

TECHNICAL DATA

AMBIENT TEMPERATURE RANGE

CSA: 32°F to 131°F
 CE, AGA: 0°C to 55°C

RADIO FREQUENCY

CSA: 918.0MHz for U.S. (FCC), Canada (ISED), (myfire Puck™, receiver)
 CE: 868.1 MHz for Europe (myfire Puck™, receiver)
 AGA: 918.0MHz for New Zealand (RNZ) and Australia (ACMA) (handset, receiver)

(see radio frequency information on page 4.)

POWER SUPPLY

Handset: 2x AAA; 1.5V (quality alkaline recommended)

NOTICE

- Wiring of control and receiver must be completed before starting ignition. Failure to do so could damage the electronics.
- The handsets and receivers are not interchangeable with previous electronics G6R and B6R-R8(9)U(T).

⚠ WARNING

To avoid damaging the electronics, do NOT use metal tools to remove the batteries from the handset/receiver.

- Without using a mains adapter, battery replacement is recommended at the beginning of each heating season.
- Old or dead batteries should be removed immediately. If left in the unit the batteries can overheat, leak, and/or explode.
- Do NOT expose batteries (including during storage) to direct sunlight, excessive heat, fire, moisture, or severe impact. Each of these conditions can cause the batteries to overheat, leak, and/or explode.
- Batteries must be kept within their recommended temperature limits (ambient battery temperature range: 32°F to 131°F / 0°C to 55°C).
- New and old batteries and different brands of batteries should not be used together. Mixing of various batteries can cause the batteries to overheat, leak, and/or explode.

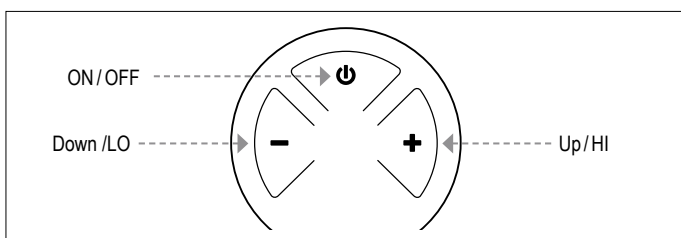


Figure 23: myfire Puck buttons

SYNCHRONIZATION RECEIVER/MYFIRE PUCK™ HANDSET


NOTICE

See page 7 for more information about synchronization between receiver and myfire Puck™.

MODES OF OPERATION

⚠ WARNING

When pilot ignition is confirmed, motor turns automatically to maximum flame height.

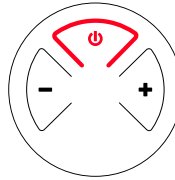


TURN FIRE ON AND OFF

- Press and hold the ⏻ button until two short beeps confirms the start sequence has begun; release button.
- Main gas flows once pilot ignition is confirmed.
- Press and hold the ⏻ button to turn **OFF**.


⚠ WARNING

If the pilot does not stay lit after several tries, turn the main valve knob to **OFF** and follow the instructions "TURN OFF GAS TO APPLIANCE" (see page 10).

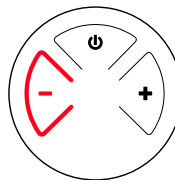


STANDBY MODE (PILOT FLAME)

- Press and hold the "-" button to set appliance to pilot flame

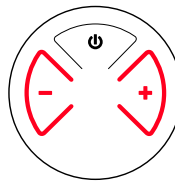

FLAME HEIGHT ADJUSTMENT


- To increase flame height press and hold "+" button.
- To decrease flame height or to set appliance to pilot flame, press and hold "-" button.

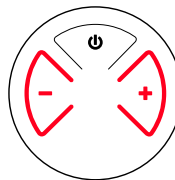

DESIGNATED LOW FIRE AND HIGH FIRE

- To go to hi fire, double-click "+" button.
- To go to low fire, double-click "-" button.

NOTE: Flame goes to high fire first before going to low fire.

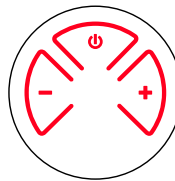

2ND BURNER FUNCTION

- ON:** Press ⏻ and "+" button.
- OFF:** Press ⏻ and "-" button.

The latching solenoid valve will open automatically after ignition or after switching the system off. The maximum flow of gas is supplied to both burners assisting with the ignition process. After pressing the buttons for the 2nd Burner function, the motor will turn in the ON direction until the max. position is reached.

A latching solenoid with reverse polarity and reverse operation is available as an option. Contact Maxitrol for more information.

NOTE: The latching solenoid valve cannot operate manually. If the receiver battery runs down it will remain in the last operating position. This does not affect the safety of the product.

⚠ WARNING

If the appliance will not operate, follow the instructions "TURN OFF GAS TO APPLIANCE" (see page 10).

MYFIRE APP SETUP

NOTICE

- For myfire App setup, you will need your Wi-Fi network SSID and password.
- Make sure Bluetooth and Wi-Fi are turned ON in Settings of your smart device to connect to the myfire Wi-Fi box. The myfire Wi-Fi box will not appear in the list of connected devices.
- Setup of the myfire Wi-Fi box and pairing with Wi-Fi is one-time only. The myfire Wi-Fi box will automatically displayed in the app of other smart devices connected to the same network as well.

For more detailed App setup/operating instructions refer to www.myfireapp.com

INITIAL SETUP

1. Download myfire App from Apple App Store or Google Play Store.
2. Touch screen to start App setup.
3. Choose language, temperature (°C or °F) and time format (12 or 24 hour).

REGISTRATION

NOTE: You must register before logging in. Registration is one time only.

1. Fill in data and accept the “Privacy Policy”.
2. Touch “OK” in pop-up notice.
3. Touch link to confirm email verification.
4. You will be shown a message that you have successfully registered the myfire App.
5. Return to App.


LOGIN

1. Fill in your registration password.
2. Accept “Terms and Conditions”.
3. Touch the “Login” button.


KWIK CONNECT

CONNECT SMART DEVICE TO MYFIRE WI-FI BOX

Touch the  icon in the app.

NOTE: As soon as the blue connection icon with the dot  appears, a Bluetooth connection with the myfire Wi-Fi box is established successfully.



NOTE: A blue connection icon without a dot  appears if you use older versions of the Wi-Fi box. The following connection steps do not apply to these versions.




CONNECT MYFIRE WI-FI BOX TO WI-FI ROUTER

1. Check if your smart device is connected to your home Wi-Fi network and is displayed in the app.
2. Enter the password of the displayed Home Wi-Fi Network.
3. Touch “Connect”. The myfire App starts connecting the myfire Wi-Fi Box to the selected Home Wi-Fi Network.

COMPLETE MYFIRE APP SETUP

1. Type in a name for your fireplace or select an icon.
2. Activate Fan, Light and 2nd Burner if installed to your fireplace.
3. If your fireplace is equipped with the optional LED light setup you can adjust and synchronize the RGB color order to meet the specifications and requirements of your installed RGB LED lights.

4. Touch the synchronize button  to synchronize time and date between your smart device and the Wi-Fi box.
5. Touch “Finish” to complete the setup.

The home screen is displayed and the myfire App is ready to go.

NOTICE

If the password is incorrect, a popup will appear. Enter the correct password. Resetting the Wi-Fi box is no longer required.

NOTICE

- To connect myfire Wi-Fi Box to Wi-Fi Router (home network), make sure:
- Home network is available.
 - Home network name and password are correct.
 - 2.4 GHz frequency is supported by the Wi-Fi Router.
 - SSID of the Wi-Fi Router is not hidden.
 - Home network signal is in range.
 - Bluetooth is activated on your smart device.
- After setting up the myfire Wi-Fi Box and myfire App, the time has to be synchronized in the settings of the myfire App.
 - The active device (myfire Puck™ or Symax or smart device) is the one last used. An exception is if the non-active device is used to change Light, Fan, or 2nd Burner. The non-active device will make the changes, but the active device remains so if it is in Thermostatic, Program, or Eco Mode. If a Profile includes a Thermostatic, Program, or Eco setting it will also cause the active device to remain active.
 - If Thermostatic, Program, or Eco Mode is activated using the App, the corresponding icon and “APP” is displayed on the Symax (see figure 27).
 - During motor movement no information between receiver and transmitter is exchanged. The synchronization follows after motor has stopped.
 - The room temperature data is transferred by the Symax during synchronization.



Figure 27: App connected (in Thermostatic Mode)

NOTICE

- It is the responsibility of the OEM to consider the following:
- The location of the GV60 system components will significantly effect the radio signal strength.
 - The type of materials (e.g. sheet metal) used in the construction of the gas fireplace will significantly effect the radio signal strength.
 - Operate the system with a dedicated mains power supply and/or batteries.
 - Do not use near household electrical wiring and/or magnetic fields.
 - Other transmitters using the same signal will negatively affect the radio signal strength.
 - Adjustment of the wired antenna on the receiver can improve signal strength.
 - Do not store or locate the GV60 system components in a hot, cold, or humid environment.

MAXITROL®

Exclusive Distributor Europe

Maxitrol GmbH & Co. KG
Warnstedter Str. 3, 06502 Thale
GERMANY

Tel: +49 3947 400-0
Fax: +49 3947 400-200
www.maxitrol.com

Exclusive Distributor North America

Maxitrol Company
23555 Telegraph Rd., PO Box 2230
Southfield, MI 48037-2230
USA

Tel: +1 248-356-1400
Fax: +1 248-356-0829
www.maxitrol.com